



Go to [Norsonic.com/downloads](https://www.norsonic.com/downloads)

Install NorConnect

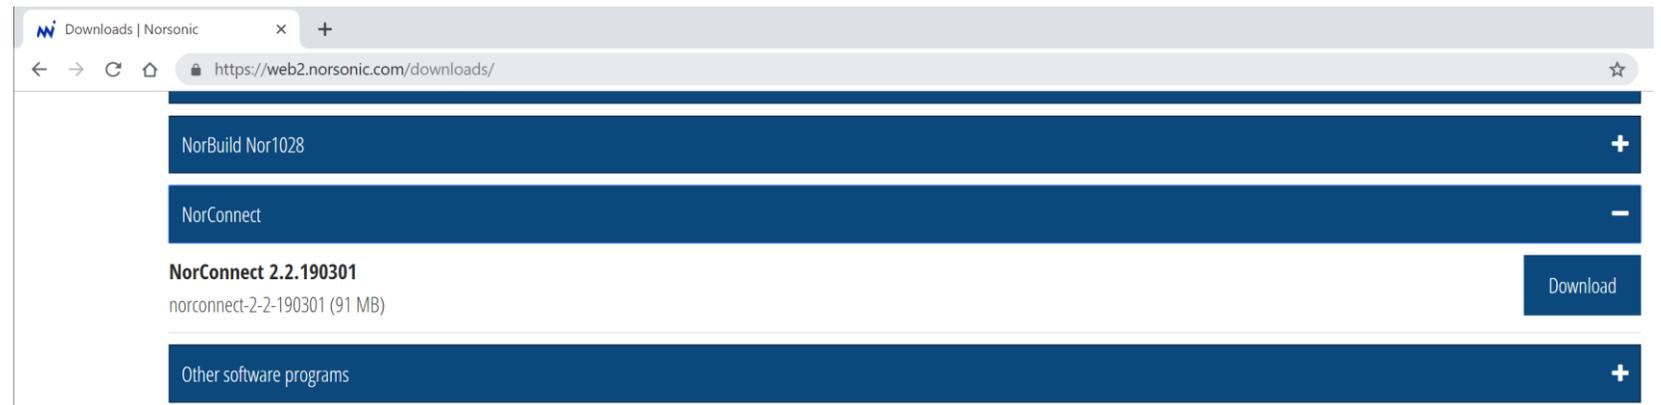

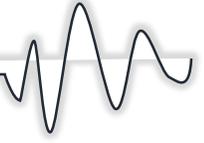

Download via SD card, LAN or WiFi using NorConnect


Go to Norsonic.com to download the application





How to download measurement:

1. Insert SD card
 2. Drag across measurement from the right panel to the left panel
 3. **Double click to view measurement in NorConnect**
- ✓ Click Excel button to report data
 - ✓ Click NorReview to open selected file

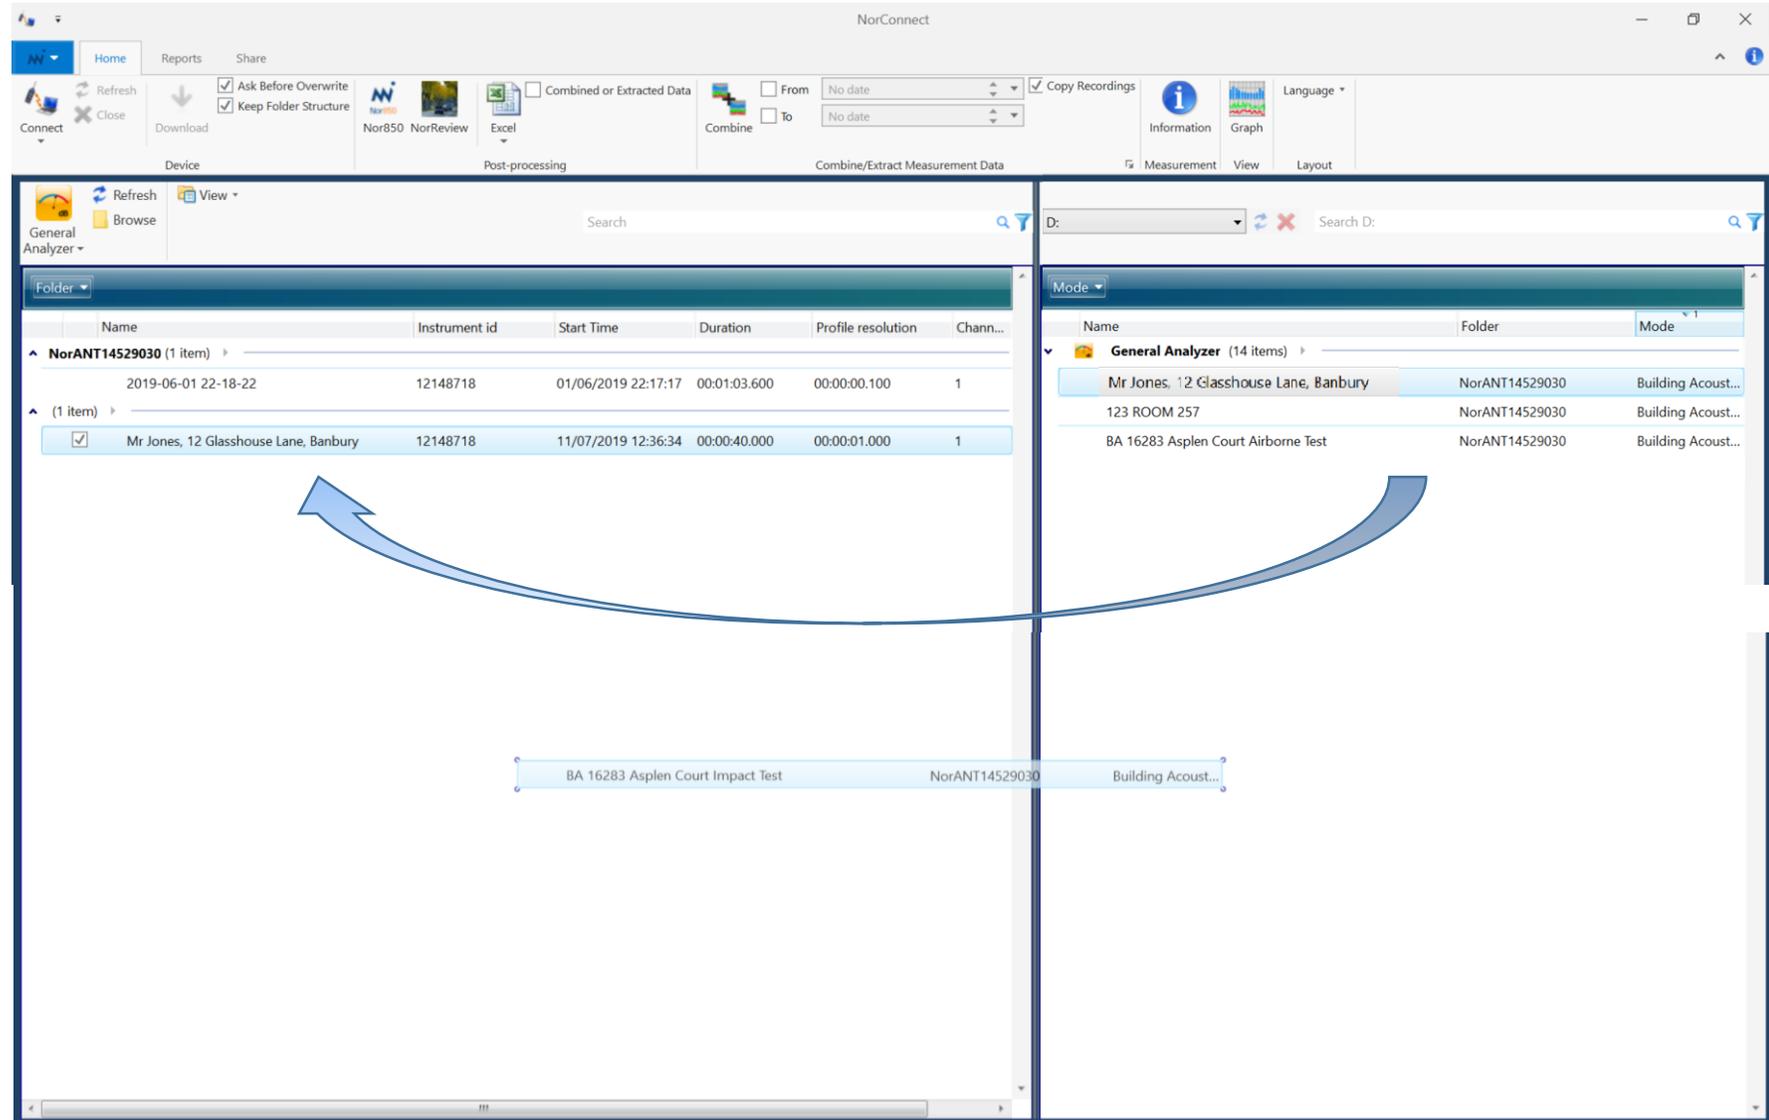

The screenshot shows the NorConnect software interface with two data tables. A blue arrow indicates a measurement being dragged from the right table to the left table.

Name	Instrument id	Start Time	Duration	Profile resolution	Chann...
NorANT14529030 (1 item)					
2019-06-01 22-18-22	12148718	01/06/2019 22:17:17	00:01:03.600	00:00:00.100	1
(1 item)					
<input checked="" type="checkbox"/> Mr Jones, 12 Glasshouse Lane, Banbury	12148718	11/07/2019 12:36:34	00:00:40.000	00:00:01.000	1

Name	Folder	Mode
General Analyzer (14 items)		
Mr Jones, 12 Glasshouse Lane, Banbury	NorANT14529030	Building Acoust...
123 ROOM 257	NorANT14529030	Building Acoust...
BA 16283 Asplen Court Airborne Test	NorANT14529030	Building Acoust...

BA 16283 Asplen Court Impact Test	NorANT14529030	Building Acoust...
-----------------------------------	----------------	--------------------




SD Card

Supports up to 128GB

Requires UHDI speed or greater


Micro SD slot | SD Adapter required

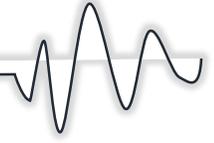

NorReview | How to preview your measurement in NorConnect

In NorConnect

- Select the measurement
- Double click your measurement

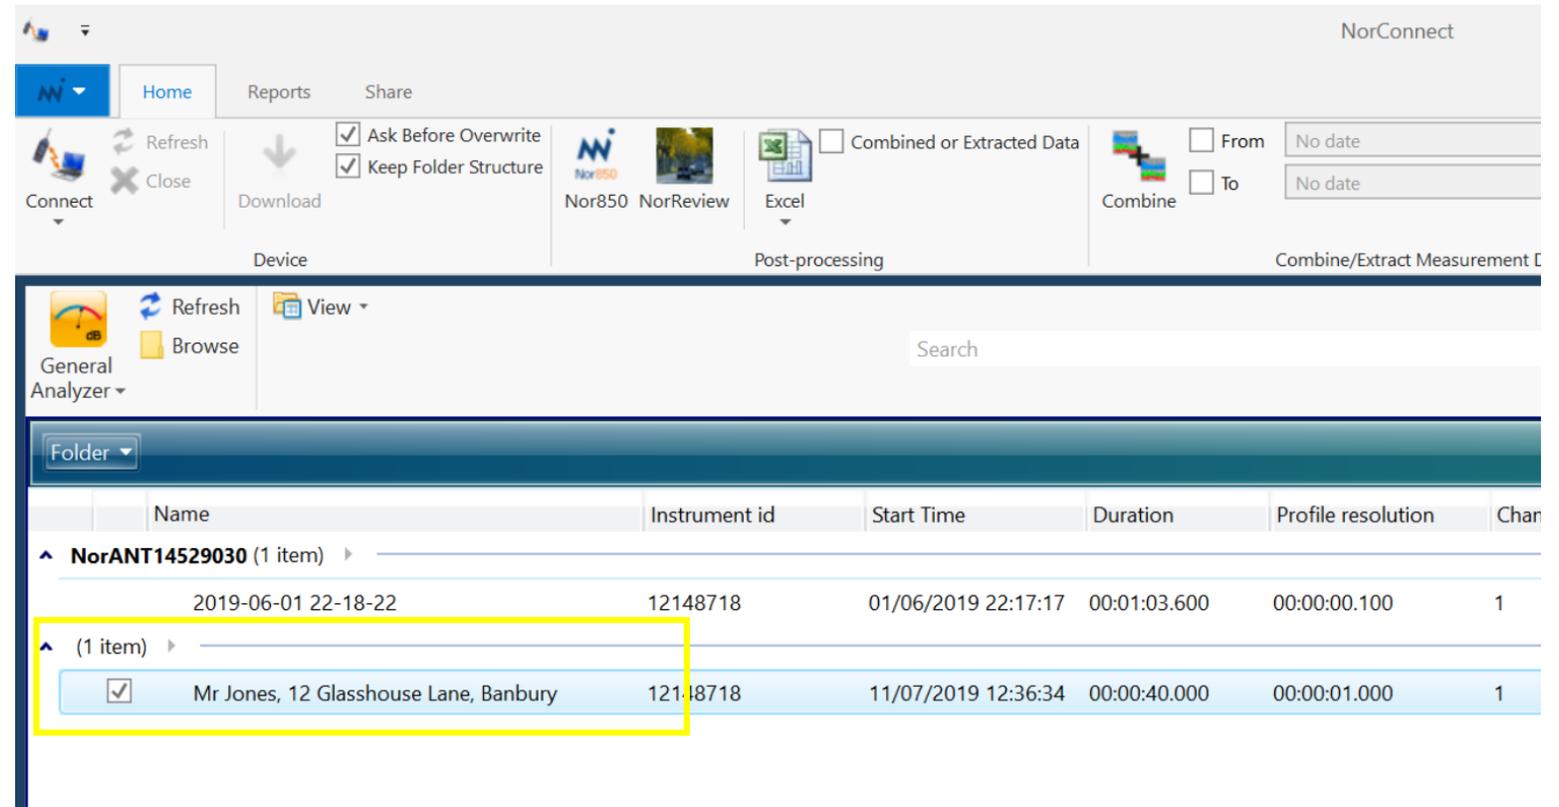

The screenshot shows the NorConnect software interface. At the top, there is a ribbon with tabs for Home, Reports, and Share. Below the ribbon are various action buttons like Connect, Refresh, Close, Download, Ask Before Overwrite, Keep Folder Structure, Nor850, NorReview, Excel, Combined or Extracted Data, Combine, From, and To. A search bar is located in the middle section. Below the search bar is a table with the following columns: Name, Instrument id, Start Time, Duration, Profile resolution, and Char. The table contains two rows of data. The first row is expanded to show a sub-row with the date '2019-06-01 22-18-22'. The second row is highlighted with a yellow box and contains the text 'Mr Jones, 12 Glasshouse Lane, Banbury'.

Name	Instrument id	Start Time	Duration	Profile resolution	Char
▲ NorANT14529030 (1 item) ▶					
2019-06-01 22-18-22					
▲ (1 item) ▶					
Mr Jones, 12 Glasshouse Lane, Banbury	12148718	11/07/2019 12:36:34	00:00:40.000	00:00:01.000	1



NorReview | How to preview your measurement in NorConnect


In NorConnect


- Select the measurement
- Double click your measurement

A Data View will open with the graph

How to play the audio recording:

- Click the GREEN bar
- Use the SPACE BAR to play/stop

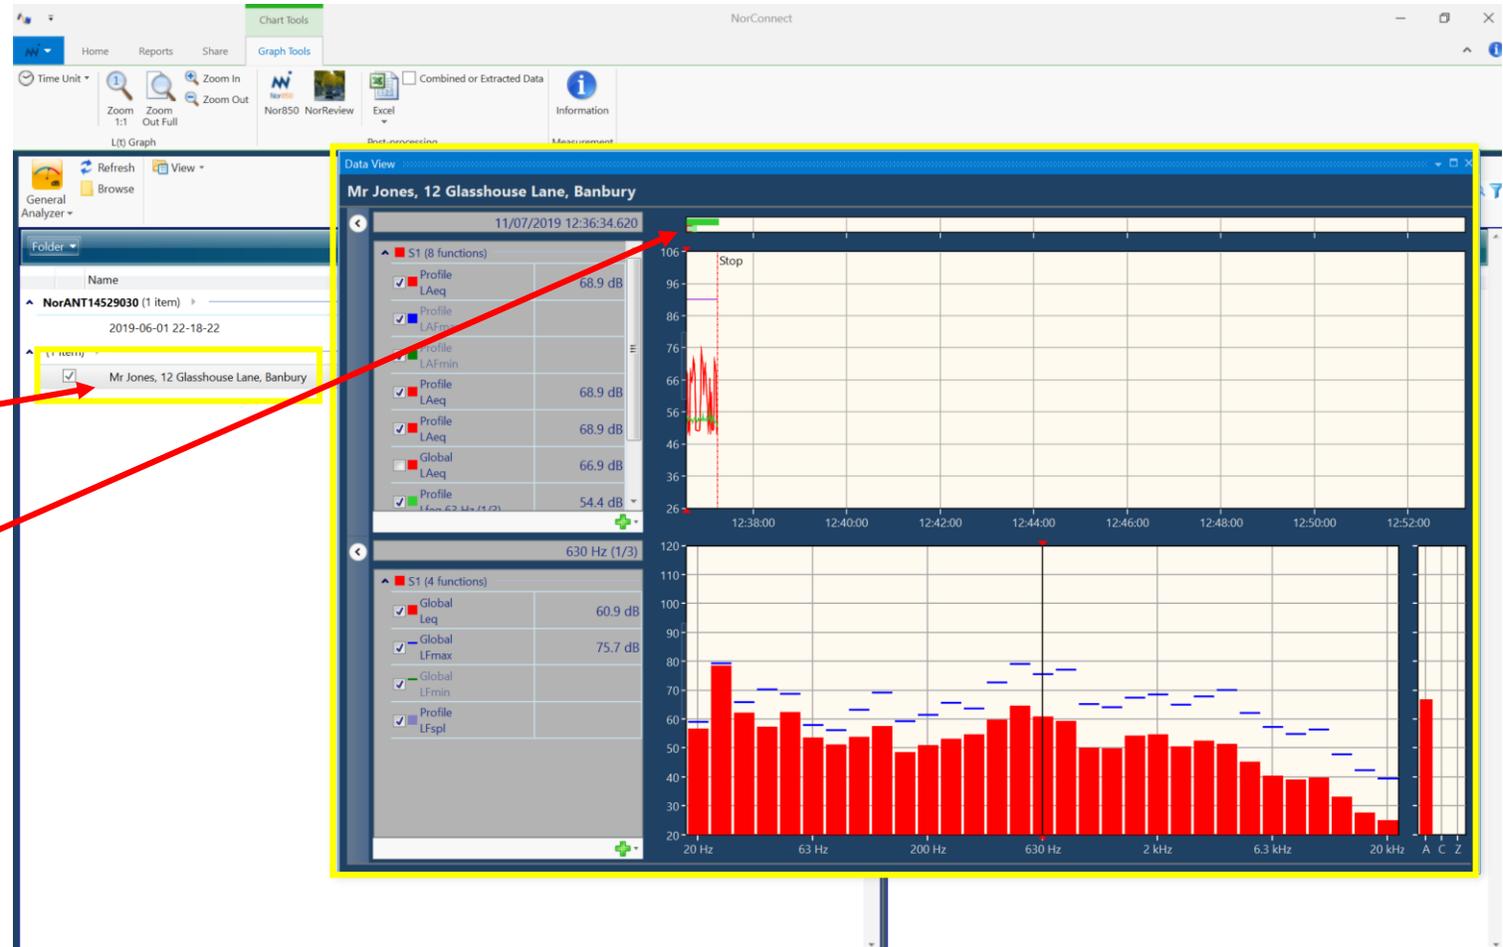


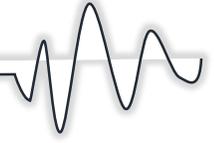

NorReview | How to open your measurement in NorReview


In NorConnect

- Select the measurement
- Click the NorReview icon

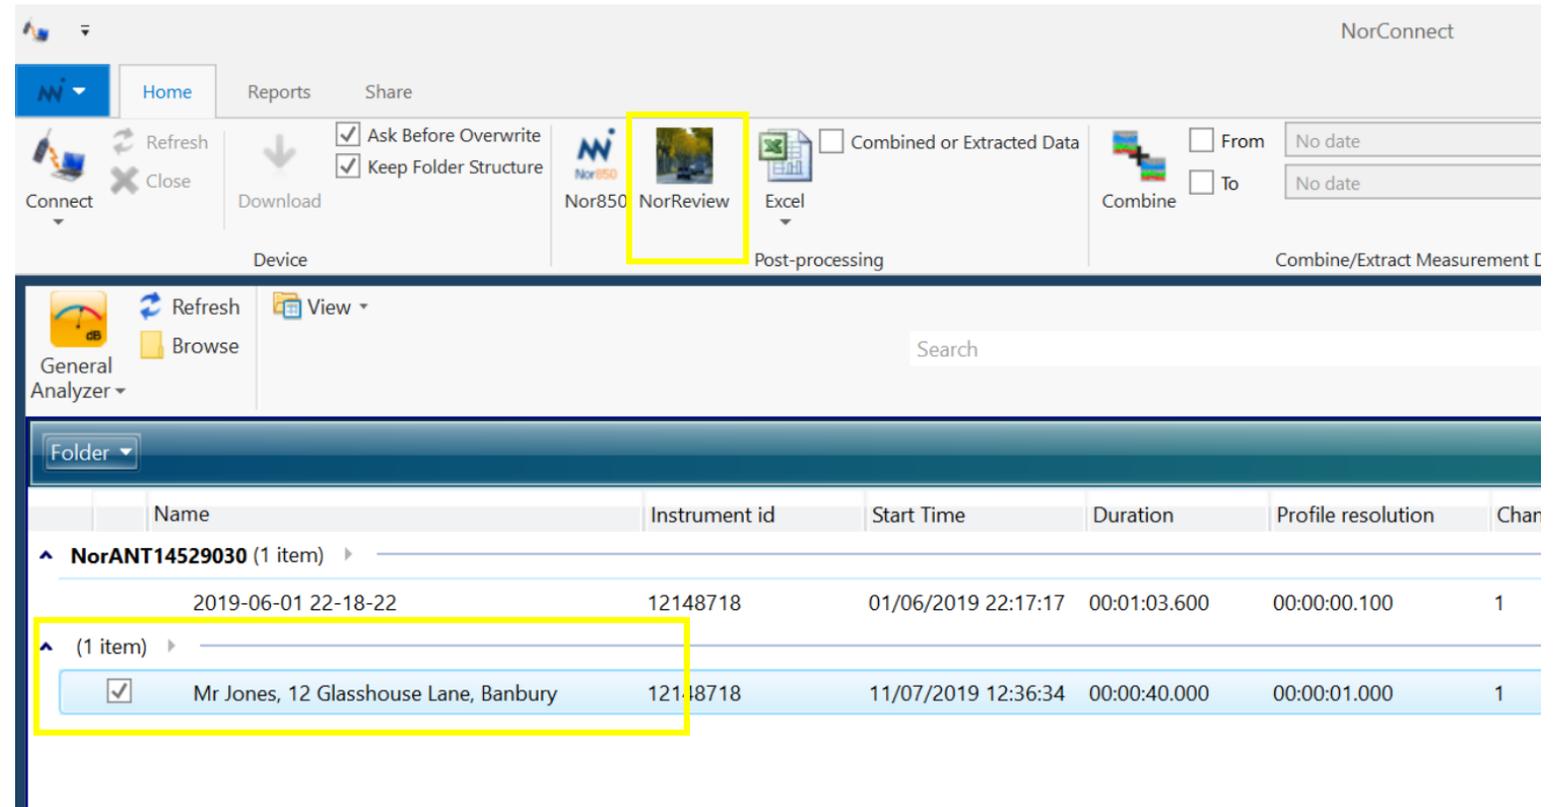

The screenshot shows the NorConnect software interface. The top toolbar contains several icons, with the 'NorReview' icon (a green square with a white 'N') highlighted by a yellow box. Below the toolbar is a table with columns: Name, Instrument id, Start Time, Duration, Profile resolution, and Char. The table contains two rows of data. The second row, which is highlighted by a yellow box, contains the following information:

Name	Instrument id	Start Time	Duration	Profile resolution	Char
2019-06-01 22-18-22	12148718	01/06/2019 22:17:17	00:01:03.600	00:00:00.100	1
Mr Jones, 12 Glasshouse Lane, Banbury	12148718	11/07/2019 12:36:34	00:00:40.000	00:00:01.000	1

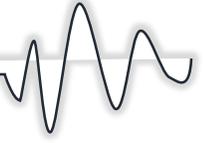

Thank you for choosing Norsonic and Campbell Associates as your chosen partner. Should you need any further assistance please contact us on **01371 871 030**

Should your equipment need calibration in future, a calibration contract can be put in place to save you time, money and hassle. We'll remind you to send your equipment into us on time, we'll send a courier to collect and send the equipment back to you quickly.

Contact hotline@Campbell-associates.co.uk to have this arranged.